


NOTES:

1. WHEN REPLACING 800856-800862, ORDER 804859 (PRE-ASSEMBLED 800856-809862)

2. FOR PNs ENDING IN XX, CHOSE THE PN FROM THE LIST BELOW WITH THE LAST 2 DIGITS CORRESPONDING TO THE HANDLE LENGTH:

SUPPORT HANDLE: CFH40, CFH66
 OUTER TUBE: 802234, 802260
 INNER DELIVERY TUBE: 802334, 802360

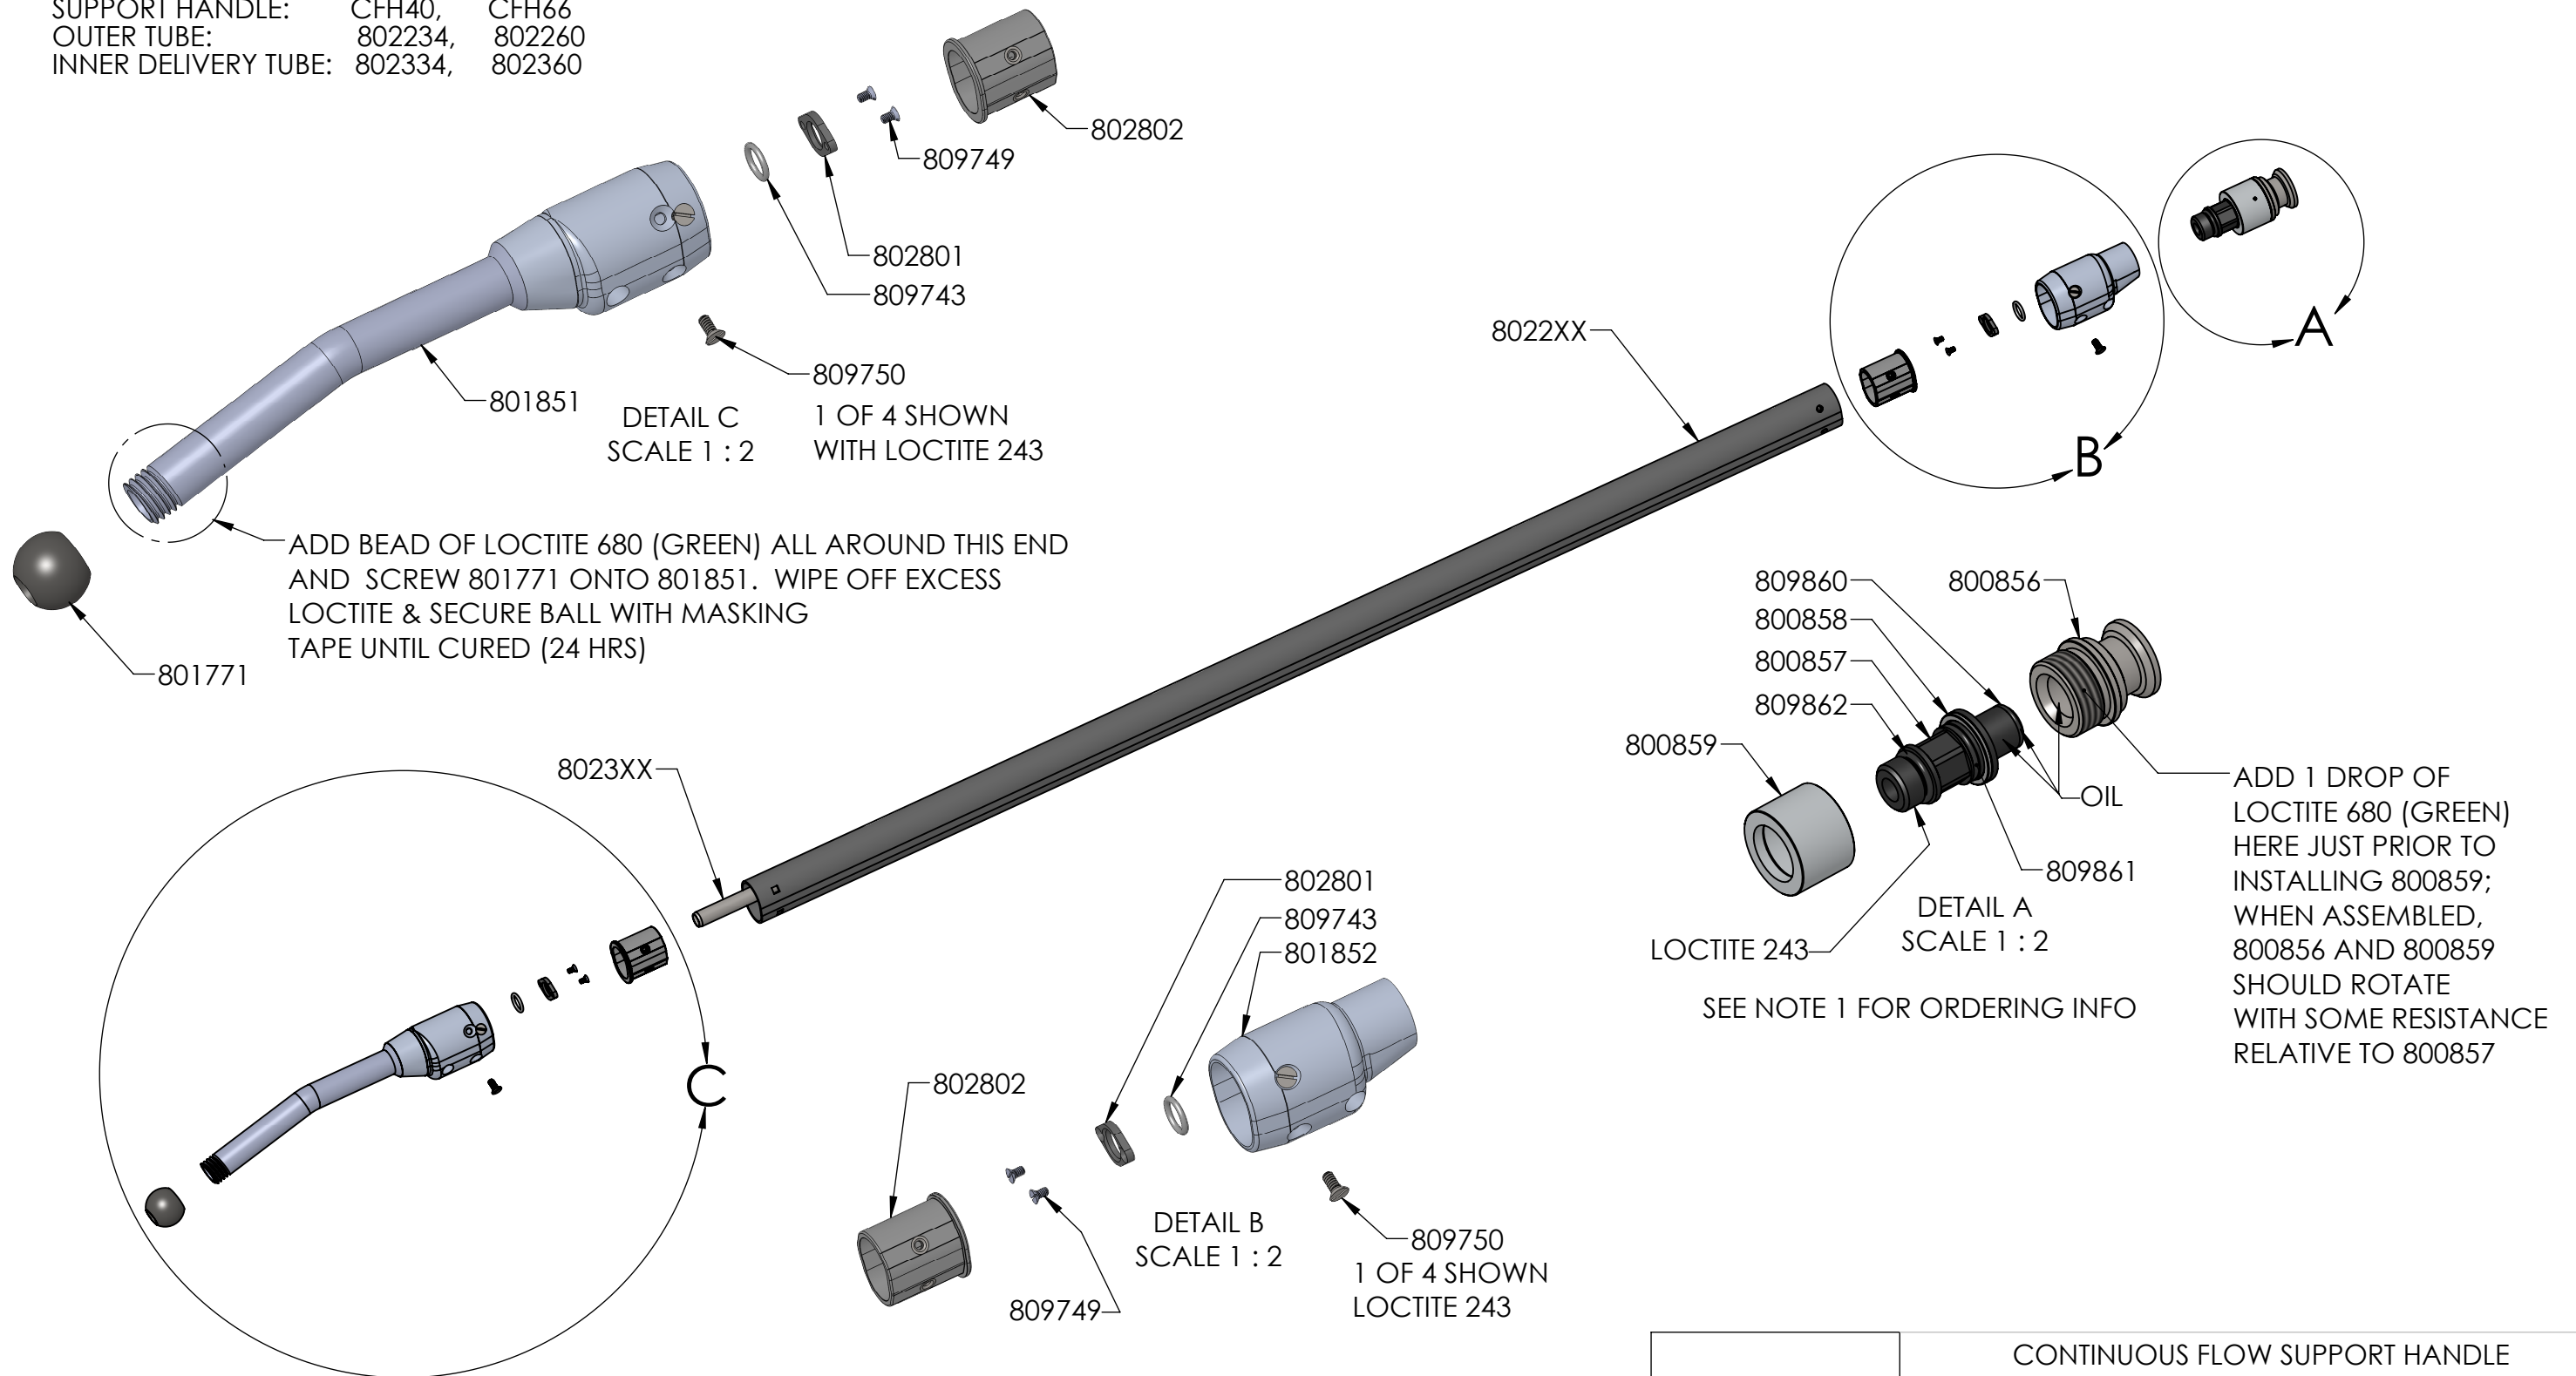

ADD BEAD OF LOCTITE 680 (GREEN) ALL AROUND THIS END AND SCREW 801771 ONTO 801851. WIPE OFF EXCESS LOCTITE & SECURE BALL WITH MASKING TAPE UNTIL CURED (24 HRS)

ADD 1 DROP OF LOCTITE 680 (GREEN) HERE JUST PRIOR TO INSTALLING 800859; WHEN ASSEMBLED, 800856 AND 800859 SHOULD ROTATE WITH SOME RESISTANCE RELATIVE TO 800857

SEE NOTE 1 FOR ORDERING INFO

CFHXTT	CONTINUOUS FLOW SUPPORT HANDLE	
	 <small>PROFESSIONAL DRYWALL FINISHING TOOLS</small>	REV. A