


**INITIAL ASSEMBLY:**

Referring to the drawing below, use a Phillips head screwdriver to install the palm rest and pistol grip handles to the WoolGroove-100 sled. Tighten each screw securely.

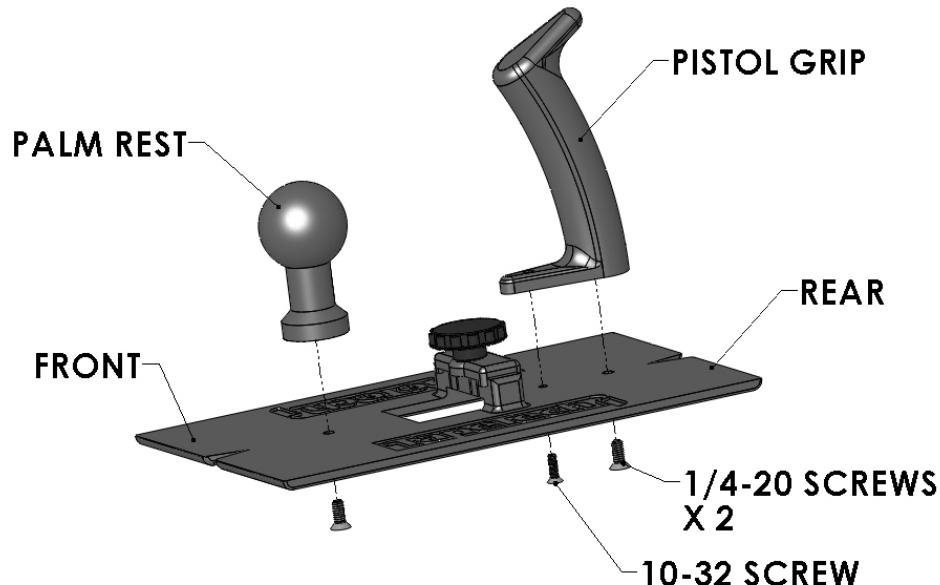


**BLADE INSTALLATION:**

**CAUTION: BLADES ARE SHARP. WEAR GLOVES WHEN HANDLING.**

Loosen the clamp screw to give clearance for the blade. With the sharpened edge of the blade toward the front of the sled, slide the blade into the appropriate slots on the sled so that the 2 horizontal blade tabs will be sandwiched under the clamp. Gently hold the blade to the back of the slots and tighten the clamp screw. Gently wiggle the blade while tightening to ensure that the blade is properly seated and that the clamp is sitting flat against the blade tabs.

When clamped properly, there should be no perceptible movement between the blade and the sled.

To remove a worn blade, reverse the process and dispose of the blade properly.

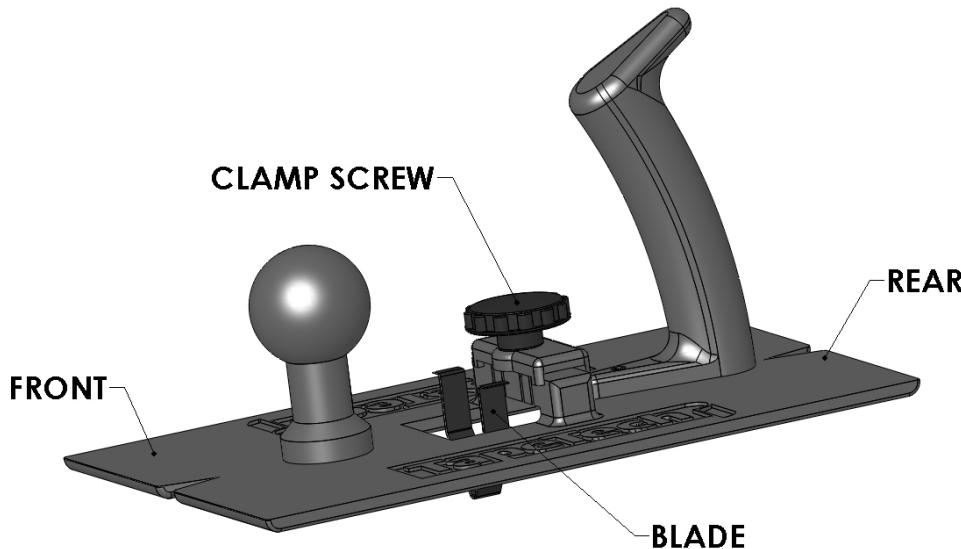

Watch the assembly video here

